

Fits Chrysler **Pacifica/Voyager 2017-2027**

Visit **MetraOnline.com** for more detailed information about the product and up-to-date vehicle specific applications


KIT FEATURES

- ISO DDIN radio provision
- ISO DIN radio provision with pocket sold separately (88-00-9004)
- Painted high gloss black
- **Note:** A separate interface is required for retaining select climate and comfort features


KIT COMPONENTS

• A) Radio trim panel • B) Radio brackets • C) Sub dash brackets • D) #10 x 3/4" Truss-head Phillips screws (2) • E) Screw inserts (2)
• F) #8 x 3/8" Truss-head hillips screws (2) • G) Panel clips (10)


A

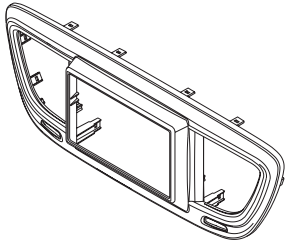

B

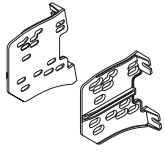

C



D



E



F



G



TABLE OF CONTENTS

Dash Disassembly.....2
Kit Preparation.....3
Kit Assembly.....4

WIRING & ANTENNA CONNECTIONS

(sold separately)

Wiring Harness: Visit **Metraonline.com** for wiring harness options
Antenna Adapter: 40-EU55

TOOLS REQUIRED

• Panel removal tool • Phillips screwdriver
• Cutting tool


Attention! ***With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections are secure before cycling the ignition to test this product.***

© COPYRIGHT 2026 METRA ELECTRONICS CORPORATION


DASH DISASSEMBLY

1. Unclip and remove the trim panel surrounding the radio/screen including the A/C vents, and then unplug and remove. (Figure A)
2. If equipped with a separate radio chassis, remove the (4) Phillips screws securing the radio chassis, and then unplug and remove.
3. If equipped with a factory metal sub-dash bracket, remove seven screws, and remove the metal bracket. (Figure C)


Continue to Kit Preparation

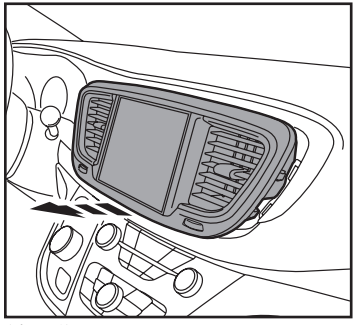

(Figure A)

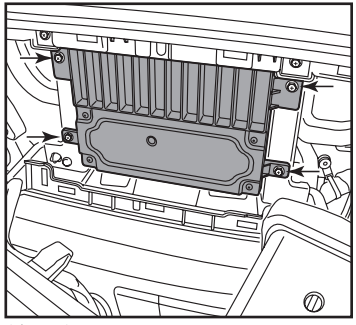

(Figure B)

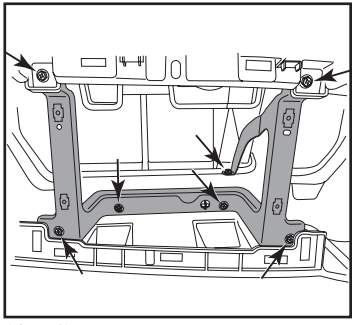

(Figure C)

KIT PREPARATION


Depending on the depth of the aftermarket radio, the sub-dash of the vehicle may need to be cut. If so, cut the plastic from the sub-dash of the vehicle. (Figure A)

From the factory radio/screen panel with A/C vents:


1. Remove the (4) Phillips screws securing each A/C vent, and then remove. (Figure B)

To the 99-6565HG radio trim panel:

1. Secure the A/C vents to the panel using the factory hardware.
2. Attach the (10) **panel clips** to the panel.

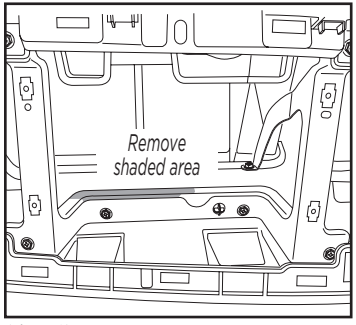

(Figure A)

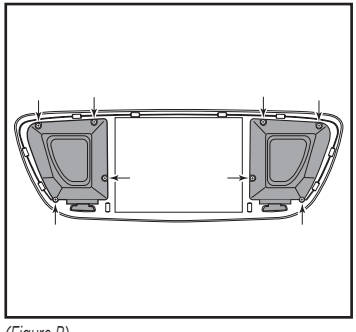


(Figure B)


Models without the separate chassis or metal sub dash brackets will need the supplied **sub dash brackets**.

1. Insert the (2) **screw inserts** into the square openings under the ducts. (Figure C)
2. Install the **sub dash brackets**. Use the supplied #10 screws for the lower mounting holes with the inserts. Use the supplied #8 screws for the top mounting holes and factory screws for the inner mounting tabs. (Figure D)

Continue to Kit Assembly

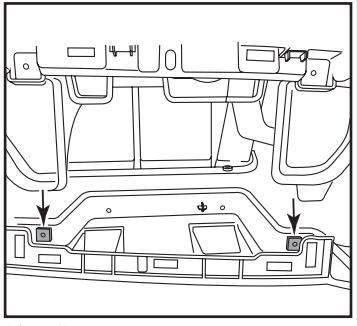


(Figure C)

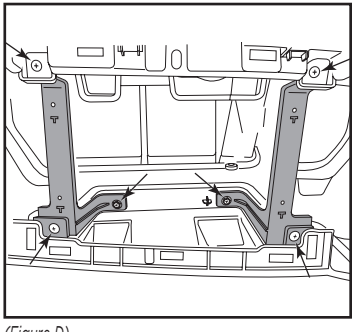

(Figure D)

KIT ASSEMBLY

1. Attach the **radio brackets** to the radio using the screws supplied with the radio. (Figure A)
2. Locate the factory wiring harness in the dash, and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra or Axxess. Re-connect the negative battery terminal and test the unit for proper operation.
3. Mount the completed assembly into the dash using the 95-6565 **radio trim panel**, and then reassemble the dash in reverse order of disassembly.

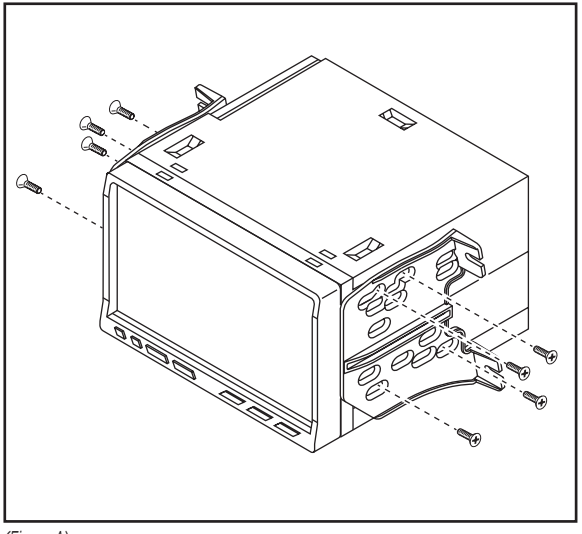

(Figure A)

Having difficulties? We're here to help.

Contact our Tech Support line at:
386-257-1187

Or via email at:
techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM
Saturday: 10:00 AM - 5:00 PM
Sunday: 10:00 AM - 4:00 PM

Metra recommends MECP certified technicians

© COPYRIGHT 2026 METRA ELECTRONICS CORPORATION